**INCLUDED PARTS:**

A = Zinc drywall anchors

B = Wood mounting ledger

C = #8 x 1 1/4" Phillips's head screw

D = Black Phillips head screw

E = Display rack

If you are in doubt about installation of the display, please contact us or contact a professional for help.

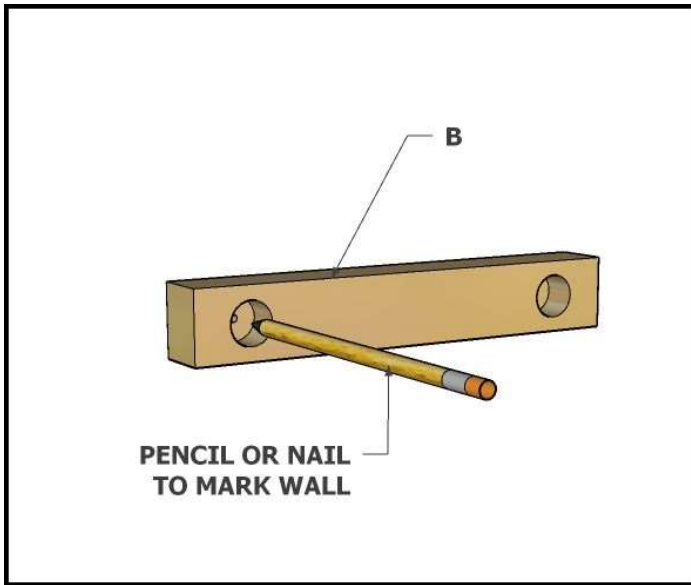
WARNING: Although ruggedly constructed these displays are made for displaying light gear and decorative items. Do not use with heavy items or personal support.

TOOLS NEEDED:

- Phillips head screwdriver
- Tape measure
- Level
- Pencil
- 3-5 of your favorite swear words (optional)

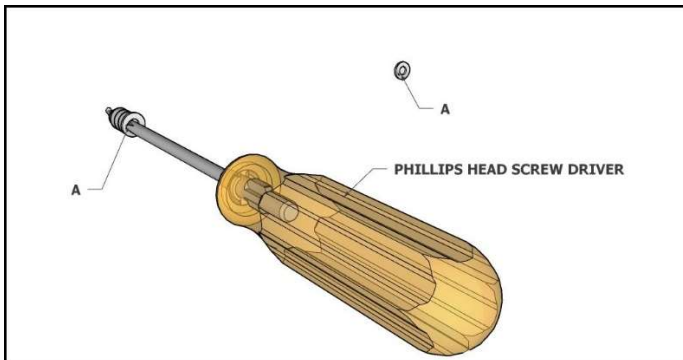
WARNING: (inspect for wires or pipes before drilling into wall)

The "A" drywall anchor is designed for installation into drywall only. Masonry anchors are not included. The "C" screw (or drywall screws) can be used for installation into wood studs behind the drywall. Pre-drill the wood studs with a 1/8" drill before screwing the mounting collar into the wall.

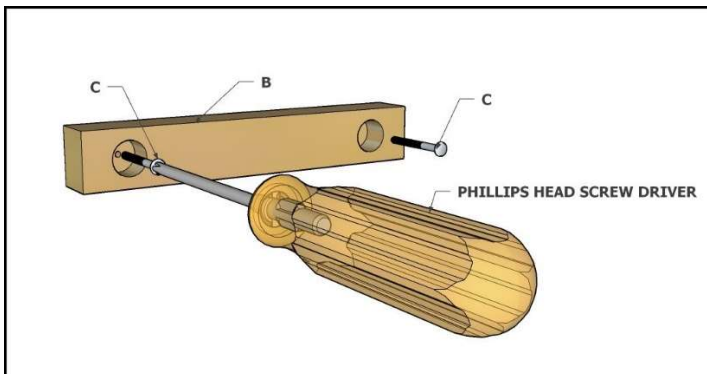
**#1**

A: Select the location you want to install your display at your drywall wall. Be sure the area behind the drywall anchors is clear of wires, plumbing, studs, or other dangers.

B: use a level at the top of the Wood mounting ledger (B) to ensure your display will be installed level to your floor when finished. Mark the holes as shown in illustration "A" on your wall with either a sharp pencil or nail. Remove the (B) wood mounting ledger to expose the locations you marked on the wall.

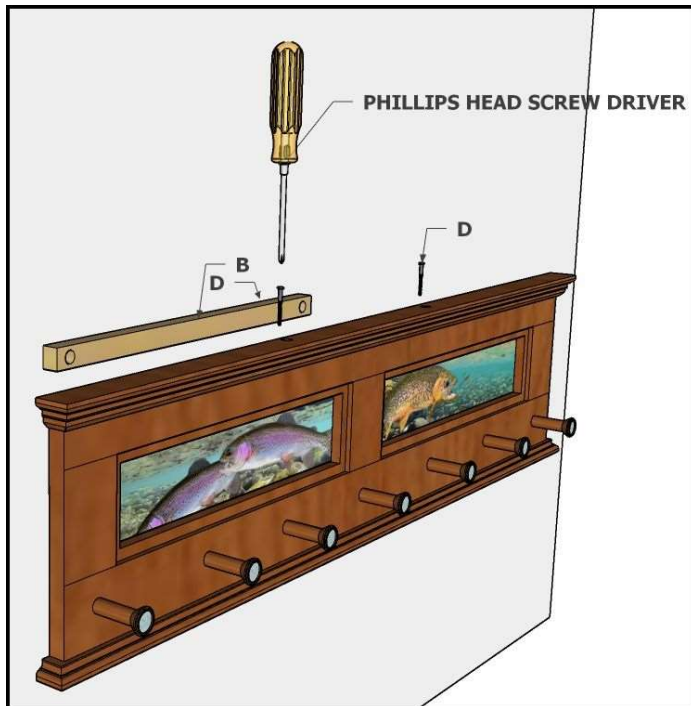
**#2**

A: Use a Phillip's head screwdriver to screw the two "A" anchors flush into the drywall. You may need to use the screwdriver to start the holes for the anchors first. Should you encounter a stud in the wall behind the drywall the "C" screw can be used without the anchor at that location.

**#3**

A: Align the "B" wood mounting ledger with the anchors you just installed. Be sure to keep the larger diameter holes facing out from the wall.

B: Use the two "C" #8 x 1 ¼" Phillips's head screws and the Phillip's head screwdriver to firmly attach the wood mounting ledger to the drywall anchors.



#4

A: Aline the top of the display over the wood mounting block and make sure the unit is flush against the wall.

B: Screw the Two "D" black screw into the top of the countersunk holes on the display with a Phillip's head screwdriver. Do not use a power drill as it may mar the wall or over tighten the screw and split the display.

Thank you for your business and do not hesitate to contact me if you have any questions.

