**INCLUDED PARTS:**

A = Zinc drywall anchors

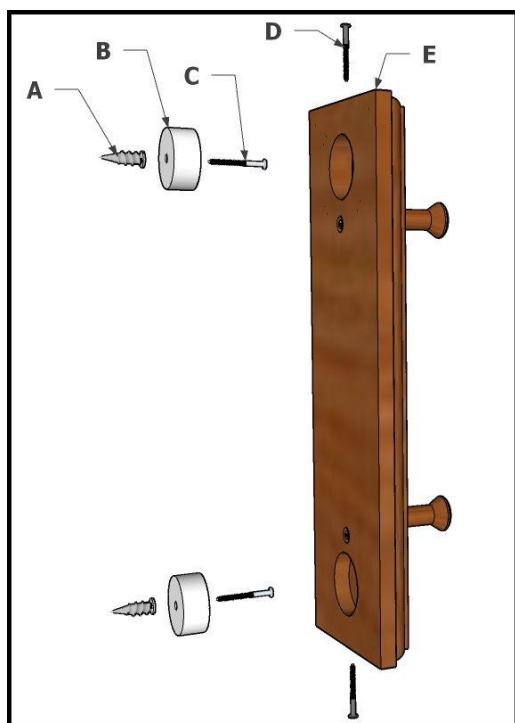
B = PVC mounting collar

C = #8 x 1 1/4" Phillips's head screw

D = Black Phillips head screw

E = Display rack

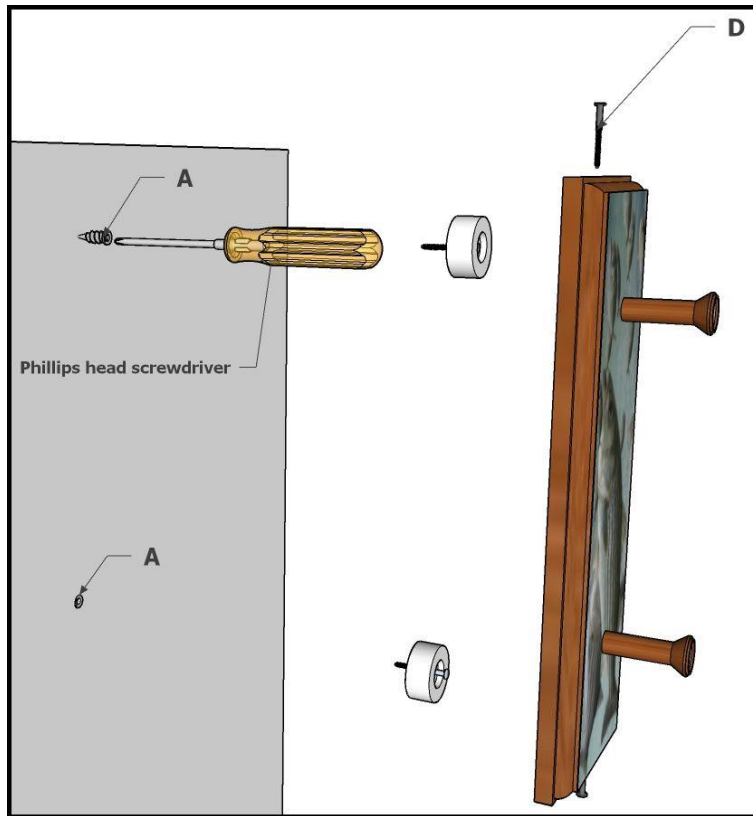
WARNING: Although ruggedly constructed these displays are made for displaying light gear and decorative items. Do not use pegs for heavy items or as a handle or personal support.

**TOOLS NEEDED:**

- Phillips head screwdriver
- Tape measure
- Level
- Pencil
- 3-5 of your favorite swear words (optional)

WARNING: (inspect for wires or pipes before drilling into wall)

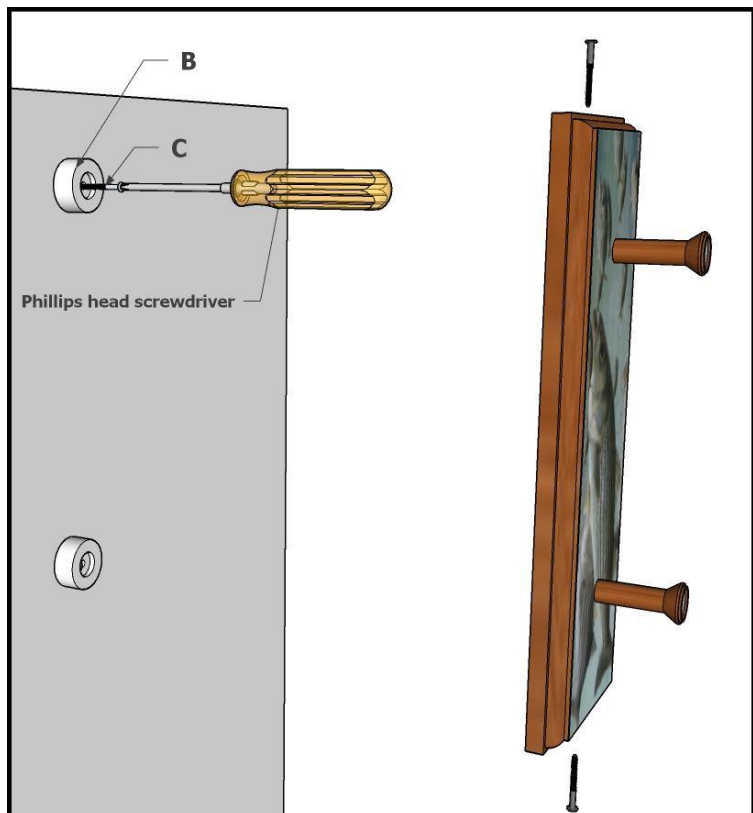
The "A" drywall anchor is designed for installation into drywall only. Masonry anchors are not included. The "C" screw (or drywall screws) can be used for installation into wood studs behind the drywall. Pre-drill the wood studs with a 1/8" drill before screwing the mounting collar into the wall.

**#1**

A: Select the location of you want to install your vertical display rack on your drywall wall. Typically, the two rod racks will be approximately 48" or greater apart (your rod may require a different distance). Be sure the area behind the drywall anchors is clear of wires, plumbing studs or other dangers.

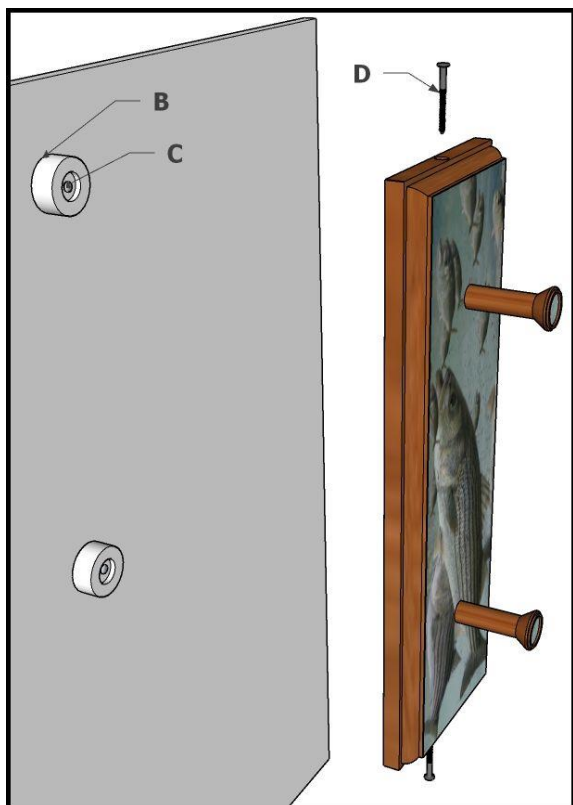
B: Use a level on the side of the rod rack to alien the two "A" drywall anchors. The "A" drywall anchors should be centered 14" vertically apart.

C: Use a Phillips head screwdriver to screw the two anchors flush to the drywall.

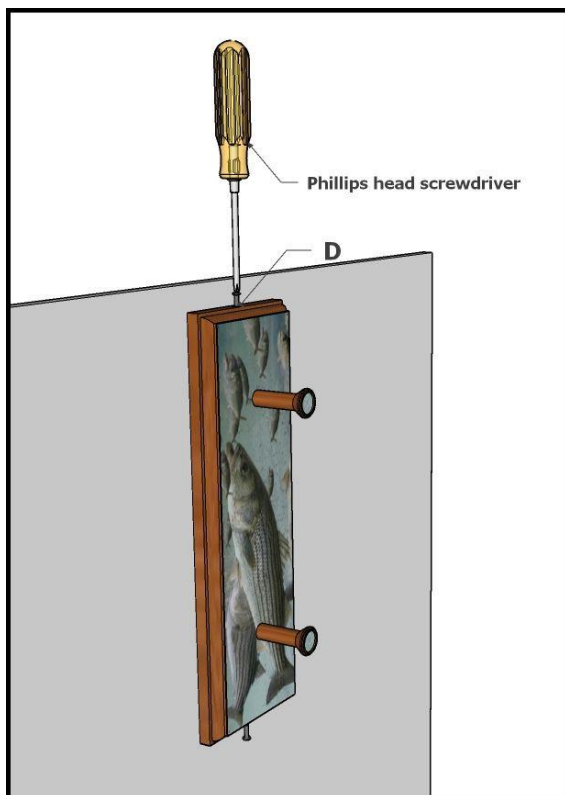
**#2**

A: Using the "C" screws to tighten the "B" mounting collars flush onto the "A" drywall anchors.

B: The "B" mounting collars are made to be a smaller diameter than the 2" hole bored into the back of the "E" display rack. This is to allow for some leeway in aligning the mounting collar and display rack.

**#3**

A: Insert the “E” display rack over the “B” mounting collars. Hold the display rack firmly against the wall and place the “D” black screw into the top counter sunk hole at the top of the display rack.

**#4**

A: Screw the “D” black screw into the top counter sunk hole with a Phillips head screwdriver and into the “B” mounting collar. Do not use a powered drill as it may mar the wall or over tighten the screw and split the display rack.

B: Repeat above step “A” for the bottom screw and mounting collar.

If you are in doubt about installation of the display rack, please contact us or contact a professional for help.

WARNING: Although ruggedly constructed these displays are made for displaying light gear and decorative items. Do not use pegs for heavy items or as a handle or personal support.